

THE PRACTICAL CARPENTER

Vol. IV

JANUARY, 1906

No. 1



RUINS AT PERSEPOLIS, PERSIA

PUBLISHED MONTHLY AT TWENTY-FIVE CENTS A YEAR BY

The INDUSTRIAL PUBLICATION CO.

16 THOMAS ST.

New York

P. O. BOX 1852

Entered as Second class matter May 9, 1905, at the P. O. at New York, Act of Congress of Mar. 3, 1879

Practical 25 Cent Books.

The books described below are thorough little manuals averaging 90 pages. They are neatly printed and bound in heavy paper covers, and well illustrated where needed. Price, 25 cents each, or 5 for \$1.00.

MONEY BACK IF NOT SATISFACTORY.

Carpentry. Treating on the principles and explaining the mechanics of the subject, joints, roof construction, timber, flooring, partitions, etc.

Practical Joinery. Treating on the best methods of joinery, such as mouldings, joints, doors, windows, parquetry, picture frames, etc.

Woodwork Joints. How to make and where to use them. Mortise and tenon joints, lap joints, dovetail joints, glue joints, scarfing joints, circular work, with 137 illustrations.

The Steel Square. By F. T. Hodgson. This work is intended as an elementary introduction for the use of those who have not time to study the larger works on the same subject.

Rafter and Brace Tables. By H. J. Aurlie. This time-saving reference book was prepared for the convenience of carpenters and builders, as it shows at sight the length of rafters and braces.

Wood Turning. Edited by John Black. Wood turning is simply and clearly described in this book and will prove useful for the amateur and young wood worker.

Glazing. Edited by John Black. The information in this manual will save much time and trouble to the practical glazier, while the apprentice will find it a trustworthy guide.

Artificial Stone, Terra Cotta, etc. Edited by John Black. Concisely describes the manufacture and uses of various kinds of artificial stone, terra cotta, hollow blocks, scagliolia, etc.

Concrete. A practical treatise telling how to mix and use. By an expert of many years' experience.

Bricklaying. A guide to the trade, telling about the various bonds, etc.

Masonry. Dealing with the various operations of cutting stone and building walls, etc.

Plumbing and Tinsmiths' Work. A treatise on roof covering, water supply, sanitation, etc.

Joint Wiping. Practical hints on, for beginners in plumbing, describing in detail the various operations and fully illustrating them from actual work, showing how the tools are used, work prepared and solders applied.

Slatting and Tiling. A practical manual of how to cover roofs with slates or tiles.

Plastering. Treating on practical plaster work, both plain and decorative.

Scaffolding. The subject of the erection of safe scaffolds for various purposes is practically treated in this useful book.

Decorating. Treating of the theory of colors, various schemes of decoration, both for interior and exterior work.

Painting and Varnishing. A practical manual treating on principles and mixing of colors, stenciling, lettering, painting brickwork, metal work, etc.

Industrial Publication Co.,
16 THOMAS ST., NEW YORK.

IF WE COULD IMPROVE THE SPECIAL SAW SET WE WOULD; BUT CARPENTERS TELL US THAT IT IS PERFECT, AND IS THE ONLY ONE ON THE MARKET. JUDGING BY THE SALES WE SHOULD SAY IT WAS.



DO YOU USE IT?

CHAS. MORRILL,
271 Broadway, NEW YORK.

JUST READY.

EDUCATIONAL WOODWORK

By A. C. HORTH.

A Complete Manual for Teachers and Organizers of Woodworking Classes. Contents of Chapters:

1. First Year Course.
2. Second Year Course.
3. Third Year Course.
4. Fittings and Furniture.
5. Discipline.
6. Organization and Method.
7. The Instruction of the Physically and Mentally Deficient and Blind.
8. Object Lessons.

Fully illustrated with reproductions from Photographs, Drawings and facsimile Blackboard Lessons. 158 pages, 12mo, cloth. Mailed postpaid for \$1.00.

SPON & CHAMBERLAIN

123 P. C. LIBERTY STREET. NEW YORK

**WHAT'S IN THE JOB
AND HOW TO FIGURE IT.**

Send 25 cents for Hicks' Handy Estimate Blanks, and save time and money.

I. P. HICKS, 308 Range Building,
OMAHA, NEB.

The Practical Carpenter.

A MONTHLY PAPER DEVOTED TO

Self-Education for Mechanics

ENGAGED IN THE BUILDING TRADES.

VOL. IV.

JANUARY, 1906.

NUMBER 1

HINTS FOR HOUSE BUILDERS.—IV.

By ALBERT FAIR.

Having, in previous articles, treated of the foundation and cellar, we will now take up the subject of drainage.

DRAINAGE.

If the house is within the precincts of a town or city, then the drainage will not be difficult, and a few general hints will be sufficient to guide the house builder. In this case the whole of the drainage should start from below the foundation walls, and all pipes should be connected at one point if possible, and there the main drains should lead to the outfall or main sewer. In all cases the drains should discharge into the top or upper portion of the sewer, and a short elbow, with its mouth downward, is the best termination for a drain pipe.

All soil pipes should be connected so as to discharge into the head of the drain at such points as will permit water, waste and overflow pipes to empty behind them.

When one drain connects with another, the angle should be as acute as possible, so that the combined currents will readily unite. The Y junction should always be used for this purpose.

All drains should have ready means of access so that they may be examined at frequent intervals, both inside and outside of the dwelling, particularly at junctions and angles. If the length is great, it is well to

enlarge their diameter and increase their fall.

Great care should be taken to make the joints of the pipes perfectly smooth inside and to remove the cement or mortar that may have fallen into them. This precaution is too frequently omitted, and the consequence is that increased friction caused by these irregular projections in the joints, and by obstructions formed along the pipes by cement, which in time becomes as hard as stone, prevents the free flow of water and forms the beginning for sediment and other deposits which eventually choke up a drain.

Too often the laying down of drain pipes is intrusted to ignorant or careless men, and the proper precautions not taken to see that the joints are water-tight, and as a consequence the joints leak and the soil becomes saturated with the foul matter, and often waste pipes discharge into an open untrapped junction out of which the gas from the sewers is constantly spreading under the floor and ascending through the house.

All drains should be perfectly ventilated, as the flow of foul air is always inverse to the flow of the current through the pipe. The foul gas collects at the head of the drain, just outside of the walls, where a trap is sometimes placed with a grating to prevent rats from entering the house by this means. From this point an upright pipe should be carried up as high as the cornice of the house, and from thence conducted

under the roofing boards into a separate flue of the kitchen chimney as being the warmest chimney in the house. If not convenient at that point, it may be carried to any other separate flue. The object of warming the pipe at this point is to rarify the air in the pipe and thus cause a draft. It is not wise to run this ventilating pipe into the chimney flue, for it sometimes happens that, from adverse winds and other causes, there may be a back draught, in which case the poisonous gas might be driven down the flue into the rooms below and cause serious results. When building flues it would be as well to provide an extra one for the purpose in one or more of the chimneys that will be in frequent use.

It may be necessary, on account of danger from frost or other reasons, to place a trap at the metal drain at some part within the house, then an upright ventilating shaft may be taken from that point and conveyed as above mentioned.

If the drain has a long distance to run outside the house, and passes under an out-building, a ventilating shaft might be placed there also, and carried up above the building, which would partly interrupt the flow of gas towards the head of the drain pipe.

Wherever a water-closet is placed, a pipe should be carried up from below the head of the trap into some convenient flue, and also another from above the seat, and sufficient space left between the door and the floor to allow of a free draught of fresh air inwards.

Some have an idea that if there is a trap to a pipe no foul gas can find its way through the water contained in it; this is not always the case. To a certain extent the trap is a great safeguard, but a heavy pressure of gas will force its way through it, particularly after an extra heavy flow of water in the trap, and, therefore, all sinks should be supplied with small ventilating pipes over them.

The flooring over all junction traps and bends, and particularly where the descending soil pipe connects with the drain, should be so arranged as to give an easy access to those parts in case of fouling.

It should be borne in mind by the reader that fevers and diseases are generated in the

system, not in the daytime when the doors are constantly being opened and the air kept circulating, but in the still night when the system is depressed and every door shut; then an exhausting action takes place in the heated house, and the foul gas, escaping from defective joints to drains, and from ill-constructed connections, is carried up between the studding of partitions and under floors and inhaled into the lungs of the unconscious sleeper, whose blood thus becomes infected with the poison. These are facts, and no one who builds a house should neglect to adopt the precautions recommended.

The foregoing on drainage was written more especially for buildings adjacent to a town or city that is provided with a thorough system of sewers, but a great many of the hints and suggestions we have made will apply to village and country houses, about which more will be said in the next article.

THE STRENGTH OF MATERIALS.—IV.

By CHARLES G. PEKER.

It will be well to remember the following facts and data relating to beams.

From an examination of the rules given we can examine the comparative strength of beams loaded in different ways. If we call the strength of a

- Beam fixed at one end and loaded at the free end..... = 1, then
- Beam fixed at one end and uniformly loaded..... = 2;
- Beam supported at both ends and loaded at the middle..... = 4;
- Beam supported at both ends and uniformly loaded..... = 8;
- Beam fixed at both ends and loaded at the middle..... = 8;
- Beam fixed at both ends and uniformly loaded..... = 12;
- Beam fixed at one end, other end supported, and loaded at the middle = 5 1-3;
- Beam fixed at one end, other end supported and uniformly loaded = 8.

These rules also indicate that the strength of a rectangular beam varies directly as its breadth and the square of its depth. From this it will be seen that by placing the longest side of the beam in a vertical position it

will have greater strength than by placing the short side vertically, because the strength increases as the square of the depth; on the other hand, the strength increases directly as the breadth. For instance: Take a beam whose sides are 10 and 3 inches, then placing the longer side vertically we have

$$10^2 \times 3 = 300$$

and placing the shorter side vertically we have

$$3^2 \times 10 = 90$$

This shows that when the beam is placed with its longer side vertically it is much stronger than when placed with its short side vertically.

A beam uniformly loaded can sustain twice as much as when loaded at the center.

It should also be noticed that by increasing the length of a beam we decrease its strength. Hence it is said that the strength of a beam increases inversely as its length.

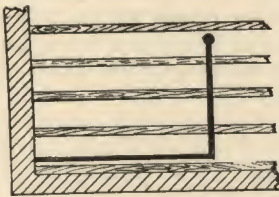


Fig. 1.

The material at the top and bottom of a beam gives it its strength, and to cut notches for pipe recesses is bad practice. As the weakest point of a beam is in the middle of its span, it is more dangerous to cut a recess here. Gas pipes, when the chandelier is to be in the middle of the room, should there-

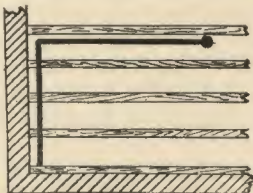


Fig. 2.

fore be placed in a recess cut in the beams near the wall, as shown in Fig. 2, and the pipe run out to the middle of the room. The arrangement shown in Fig. 1 should never be used, as it takes material from the beam at the point where it is needed the most.

If a knot should be in a beam near or at the top or bottom, the beam should be placed so that the knot will be nearest the top, as this portion of the beam will be in compression, as shown in Fig. 3; the fibres of the wood will be pressing on the knot from both sides, keeping it in place. If the beam is placed with the knot at the bottom, as shown in Fig. 4, the fibres here being in tension would pull away from the knot at each side, thus making the beam weak if not making it break or fracture.



Fig. 3.

For cantilevers, such as beams for projecting balconies, bay-windows, etc., the conditions are reversed and the part of the beam containing the knot is placed at the bottom, as then the fibres are in tension at the top.

If a square beam is supported on its edge—that is, with its diagonal vertical—it will be only .7 as strong as if it rested on its side.

A cylindrical beam is only 1-17 as strong as a square beam whose side is equal to the diameter of the round beam.

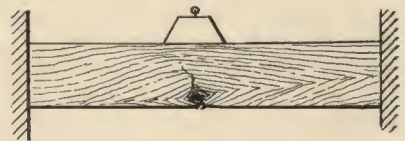


Fig. 4.

The bearing of the ends of a beam in the wall beyond a certain amount does not strengthen it, but the bearing should not be less than $3\frac{1}{2}$ inches except for very short spans.

We have mentioned in our rules that the weight of the beam is neglected. For small beams we can safely neglect the weight of the beam, as it is usually small when compared with the load. In beams of over 20 feet span the weight of the beam should be subtracted from the safe load.

(To be continued.)

The Practical Carpenter

A Monthly Paper
Devoted to . . .

Self-Education for Mechanics

Engaged in the Building Trades.

Subscription Rate—Per year, 25 cents, postpaid in the United States, Canada and Mexico. All other countries within the Postal Union, 10 cents extra for postage. Strange to say, this also applies to subscriptions in New York City.

RENEWALS.—If a blue pencil-mark appears in the square, your subscription expires with this issue, and you are kindly asked to renew. This is the only notice we will give, as our subscription rate is too small to warrant sending out bills.

Remittances should be made by Postal or Express Money order or by Registered Letter. Personal checks or small amounts we cannot use. United States and British postage stamps received at their full value. The British halfpenny is equal to one cent. Canadian, Mexican and all other stamps we cannot use, as there is no market for them here. Receipt of a subscription is acknowledged by sending the current issue.

Advertisements—25 cents per line, agate measure; \$2.50 per inch. Special rates for cover pages. No medical advertisements, humbugs or blind advertisements accepted at any price.

Address all communications to
THE INDUSTRIAL PUBLICATION CO.,
16 Thomas Street, New York.

VOL. IV.

In commencing our fourth volume, we have to thank our readers for their kind assistance, as we have depended mainly on them for suggestions of what articles to print.

We are trying to give our readers what they want, making the PRACTICAL CARPENTER their paper, and to accomplish this, we trust to be favored with suggestions as to what would interest them most.

With this issue the majority of subscriptions expire, and we urge upon all to promptly renew. The price is so small that the matter is likely to be overlooked. We receive many complaints about not receiving copies and find that the fault is due to the subscription having expired.

We would like to add many new names to our list beginning with the January issue and make our readers a special offer of three subscriptions for 50 cents. Then by

securing two new subscribers you can get your renewal free for your trouble.

Through an accident on the printing-press, the illustration of the pinch-bar described in the article, "A Few of the Tools You Can't Buy," by Emery H. Chase, in our December number, was not printed in the space left for it. We here give this illustration:



BACK NUMBERS.

Volume III of the PRACTICAL CARPENTER contains quite a number of valuable articles that will show how to save time and money for the mechanic.

We have about 30 sets, and while they last, we will send the 12 issues for 1905, postpaid on receipt of 25 cents. We believe that nowhere else can a quarter buy such a quantity of good information about carpentry.

"A bad man is worse when he pretends to be a saint."

ACOUSTICS.

A correspondent sends us a sketch of a church and wishes to know how to remedy its poor acoustic properties.

There are so many things that go to make up or destroy the acoustic properties of a room that it is difficult to say what is wrong unless all points are specified.

The only acoustically perfect room is an egg-shaped one. Here the distance to the walls and ceiling from the point of the speaker's platform is practically the same, and in practice this is the point to be aimed at.

Irregular shaped rooms, especially those with domes, groined or vaulted ceilings, or with large ventilating shafts in center, can never be made good.

The plaster, if it is placed solid on the brick, stone or artificial stone walls, will render an otherwise good room into an inferior one, as will also the lighting, heating and ventilating arrangements.

BARN FRAMING IN SOUTHWESTERN NEW YORK AND NORTHERN PENNSYLVANIA.

By EMERY H. CHASE.

The present method or system of barn construction in southwestern New York is the result of many changes of general plan, but keeping the original method of framing, namely, that of the boxed mortise-and-tenon style.

This large section of country is largely agricultural, and the building of storage barns and sheds for the shelter of farm crops is one of the main problems for the builder of this locality.

The accompanying drawing shows the general plan of a typical barn frame of a building 38x64 feet, with 16-foot main posts, gambrel roof, basement and double driveway floors.

One point worthy of note as different from other barns is to get height—not width—to get as much under a given amount of roof as possible. That this is an advantage has been so slowly but so well learned that the farmer will tell you the bay or mow is only half full when filled even with the main plates. The weight of the portion to be stored above keeps pressing the lower part down—an advantage lost in the low, wide barn. All of the crops are lifted by means of rope and tackle and carried by means of a steel track and car the full length of the barn just under the ridge of the roof and then dropped to its proper place in the bay or loft over the driveway floors, the power being furnished by a horse team.

Another important principle in the construction of these buildings is that no timbers supporting a heavy load—as beams, cross sills, etc.—shall rest on their tenons alone, but shall have a shoulder or bearing across the whole end of the stick. The drawing will show the ends of beams boxed into the posts, while the ends of the cross sills have a bearing on the end of the basement post below. Good framing also requires that all braces shall not hold against the tenon alone, but shall have a boxing of at least one-half inch depth. This I have tried mainly to show, although I may have failed in a few instances in making the drawing.


Another important principle is in the draw-bore pins. By this is meant the pins that hold the tenons; ordinary drift bolts or spikes would not do, as a pin made of wood is larger than the iron ones would be and will not side-cut or press into the wood so much as the iron ones would do under a heavy load. Also the pins must have a long taper to give "draw." The draw-bore holes in the tenon and those through the mortise are given one-eighth inch draw or variation in such direction as will tend to pull the tenon and seizing tighter into the mortise and boxing. That is to say, the distance from the joint to the draw-bore hole is one-eighth inch greater in the mortise than in the tenon.


All of the large cross timbers should be of whole sticks—not spliced—that is, the beams and cross sills in particular; but the main sills and plates may be spliced at every bent or post if desired. Sometimes long timbers are very hard to get, in which case the width of the barn can be made to conform to length of timbers obtainable from 30 to 40 feet. There is an old whim in circulation that several planks spiked together will make a stronger stick of timber than a solid one. This is not true; after having tried it many times I am prepared to say you can make a stick fairly stiff one way, but with all the spikes you can drive it cannot be made stiff the other way.

The length and number of posts in this barn are entirely arbitrary, as well as the height of the purlin plates.

This kind of barn is supposed to be built on a gentle hillside, thus allowing an easy driveway to the main floor of the barn and giving opportunity for a basement underneath to afford valuable storage room for implements and for warm stables.

While there may be kinds of construction which would afford greater strength than that shown in the drawing, this method has been found to answer every purpose, and the added advantage of other methods of framing will not warrant the difference in cost. Besides, this style of barn so fully answers the needs of the farmer that it is being copied in many other localities than those mentioned, namely, Ohio, Wisconsin, Michigan, Indiana and parts of Canada.

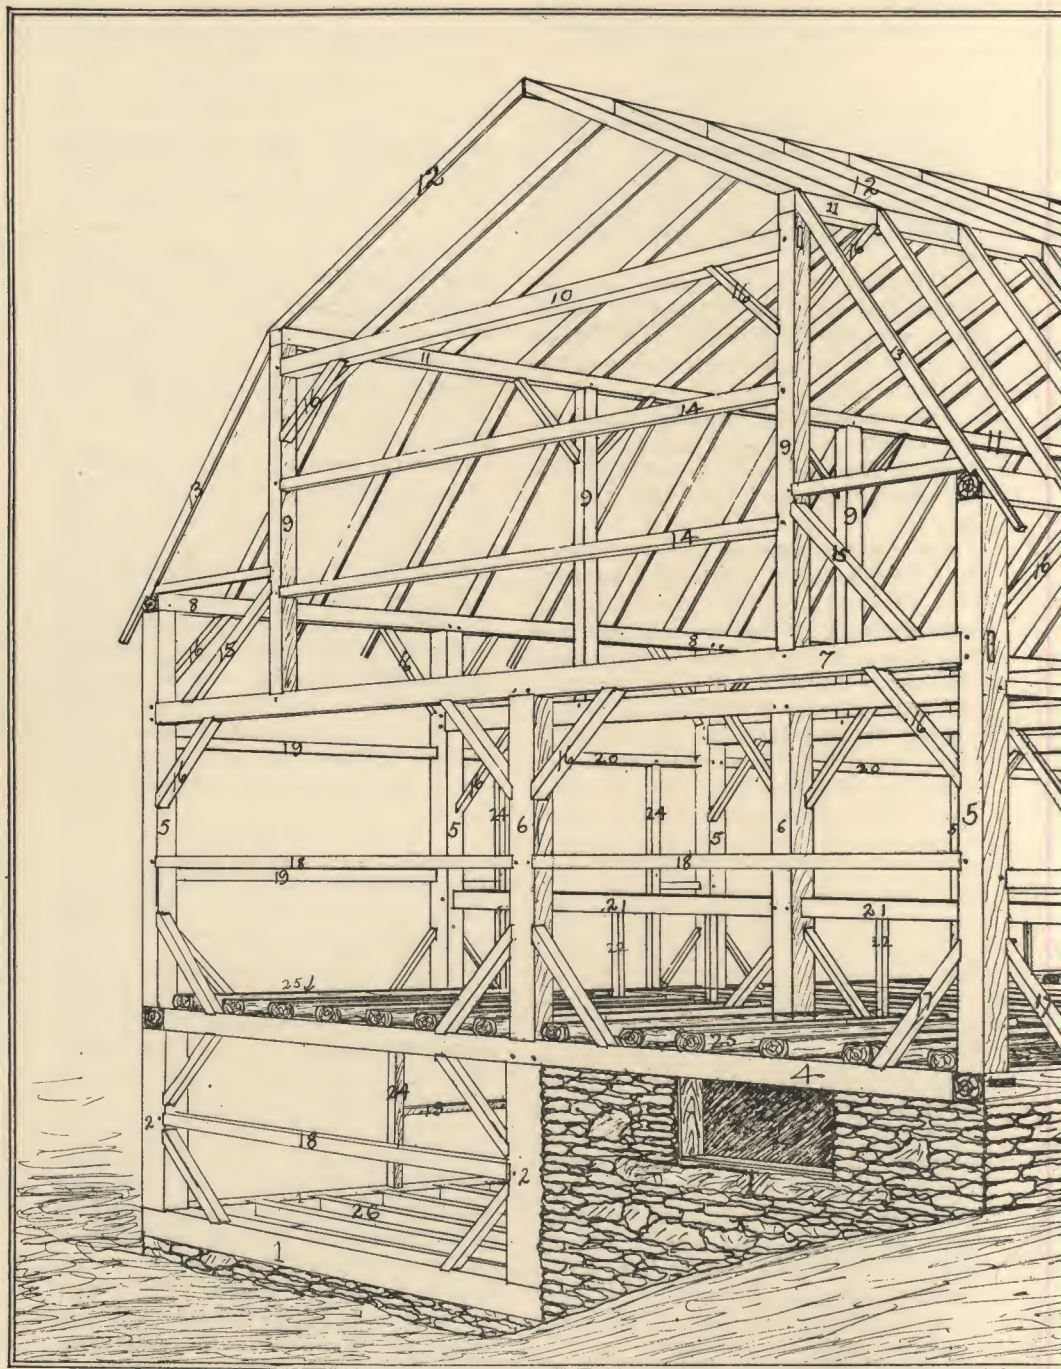

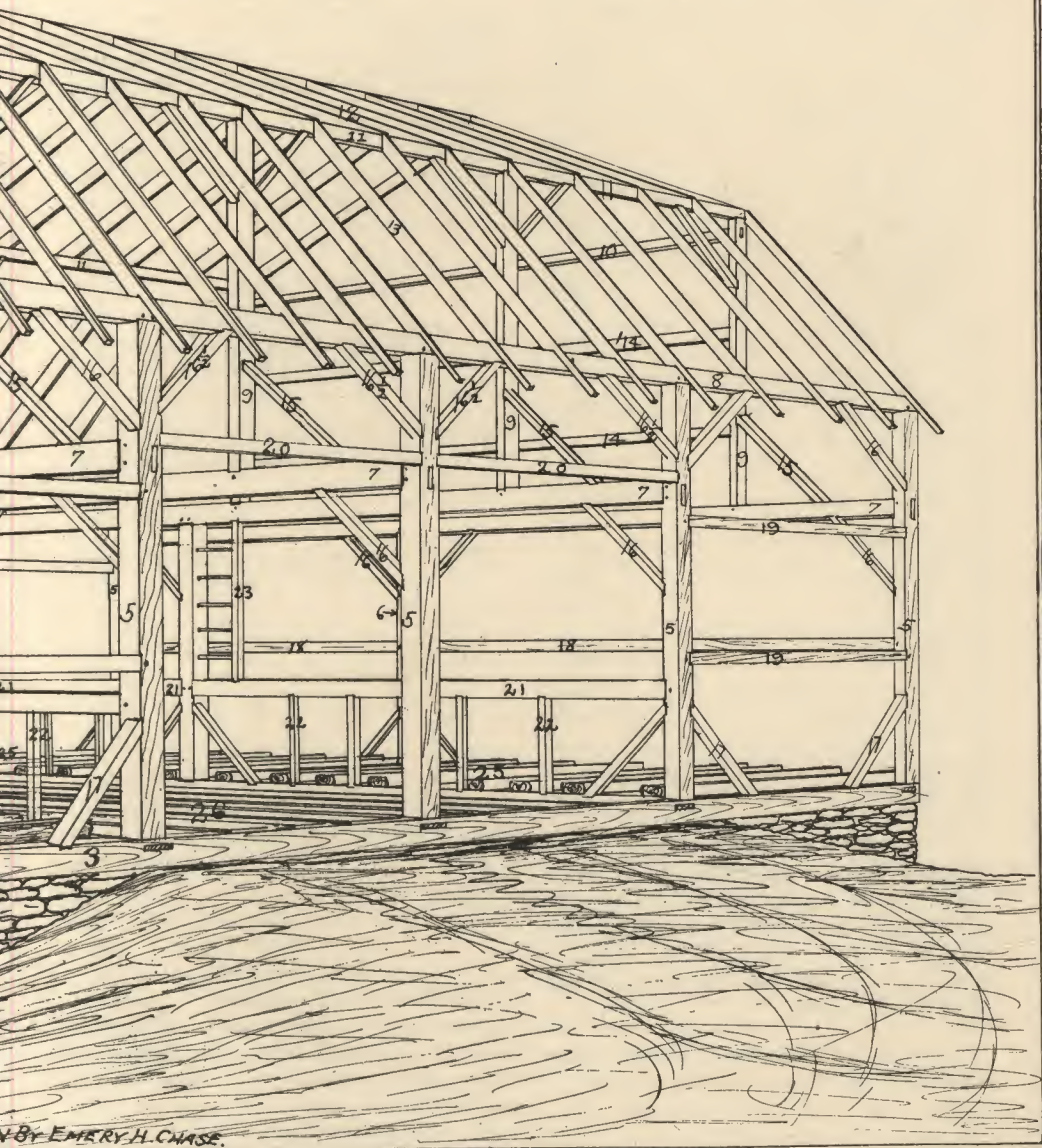

At first glance one would think such a frame a wilderness of timbers; but, as a matter of fact, the system is simple, and the number of the names of the different members or parts is not great. The following list will give the names of them. In this I have followed an idea recently submitted by Mr. Albert Fair in his "House Chart"—a thing which I thought was very interesting and useful:


	<i>Size, Inches.</i>
1. Basement sill.....	10x12
2. Basement posts.....	12x12
3. Main sill.....	10x10
4. Cross sill.....	10x10
5. Main post.....	8x8
6. Center post.....	8x8
7. Main beams.....	8x10
8. Main plate.....	8x8
9. Purlin posts.....	6x6
10. Purlin beams.....	6x6
11. Purlin plate.....	6x6
12. Upper rafters.....	2x6
13. Lower rafters.....	2x6
14. Purlin girts.....	4x6
15. Purlin braces.....	3x4
16. 3-ft.-run brace.....	3x4
16½. 2½-ft.-run brace.....	3x4
17. 3½-ft.-run brace.....	3x4
18. End girts.....	4x6
19. Side girts.....	4x6
20. Door girts.....	4x6
21. Breast girt.....	6x8
22. Breast girt studs.....	3x4
23. Ladder post.....	3x4
24. Door posts.....	4x4
25. Overlays, top and ends flatted to..	6
26. Sleepers.....	6x6

SCREWS IN SOFT WOOD.

Screws in soft wood are apt to work loose if subjected to strain. To prevent this the screw hole should be first filled with thick glue. If no glue is handy put powdered resin around the hole and heat the screw before driving.

"Revenge is a kind of wild justice, which the more a man's nature runs to, the more ought law to weed it out."—Bacon.


"He that cannot see well, let him go softly."

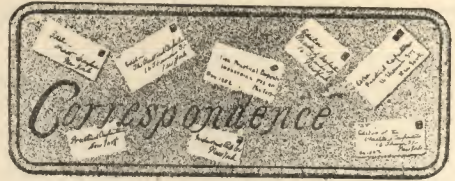

Portable Horses.

EDITOR PRACTICAL CARPENTER:

Saw horses are very awkward to stow away, and it is a convenience to have porta-

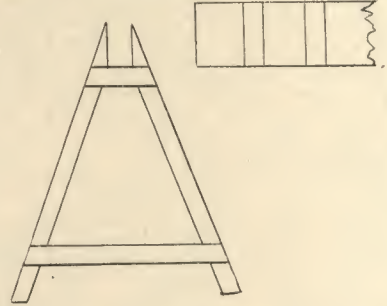

ble ones that can be easily moved from one job to another. The sketch shows its construction.

ARTHUR LEWIS.

A Simple Device for Sawing Off Fence Posts on a Bevel.

EDITOR PRACTICAL CARPENTER:

Take two pieces of $\frac{1}{2}$ x 6 inch x 3 feet and nail together like a corner board. Then saw the required bevel on one end and use it for the top. Then nail the template to the post, just plumb two ways, and you will find it an easy matter to saw the posts on the required bevel. Then change the template to the next post and so on. This makes a guide for the saw and they will come very accurate.

F. A. W.

Hood Rafters.

EDITOR PRACTICAL CARPENTER:

I have read many articles on framing, but I never read how to frame hood rafters for barns. Old carpenters know how, and for the benefit of the beginners that don't know how I will give my method.

I first put in a 2x6 or a 2x8, 11 feet long, running back between the rafters to the

fourth pair from the end of barn, making the hood about 5 feet long. Then I cut my 1x12 cornice board to run from the railroad cornice to the end of hood on each side. I lay the board in position on the common rafter and on the ridge piece. I tack it, then mark on the ridge where the inner edge of board comes, also on the common or main rafter; then I mark back one inch for hood rafter to allow the nailing of cornice board on hood rafter. Then I lay my rafter in position and mark the top end to fit ridge piece first, saw it, then place it in position again, having top of rafter flush with top of ridge, then mark the other end on bottom edge, then square across to top edge and cut.


J. M. SHIRLEY.

Saw-Filing Vise.

EDITOR PRACTICAL CARPENTER:

Below I give a sketch of a saw-filing vise that can be very easily made.

As will be noted, the saw is put in between two pieces of board 4 inches wide, 28 inches long and about $\frac{3}{8}$ inch thick, as shown at D on sketch. B on sketch is a foot-rest and A is the knee-rest. C C are made of 2x4x38

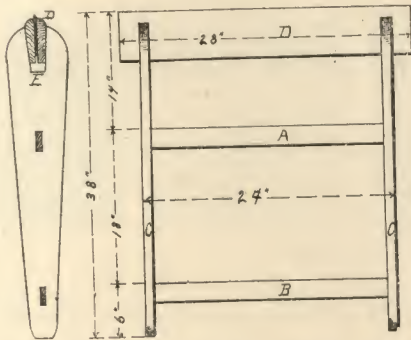

inch pieces. E is a wedge-shaped opening, so that the saw in between D can be pressed in, thus holding it firmly.

Pieces A and B should be mortised in end pieces so as to make the thing solid. When in use lean the vise against something, put the saw in, place your foot on the rest B and your knee against A, and file away.

D. J. DODRILL.

"Without good nature, man is but a better kind of vermin."

Dished Floors.

EDITOR PRACTICAL CARPENTER:

I should like to find out the best way to frame a dished floor (circular); also, the best method of making pews for same.

F. R. AMER.

We assume that the church is to have the pews arranged in a circle, for if they are placed straight, the floor need be only an inclined plane. The pitch in either case should not exceed $\frac{1}{2}$ inch to the foot as a greater inclination is unpleasant to walk upon.

If a room is to be placed under the room with the dished floor, frame the floor for an incline, and then nail on furring strips on the joists, so as to get the proper dished effect. These furring strips should be 2 inches wide and well nailed to the joists. At the outer walls the depth of these furring strips will be considerable, and if they have to exceed 6 inches in depth, they should be bridged the same as joists, to prevent buckling. Use as large timber as possible, that is if a depth of 6 inches is needed, don't build up out of 2x2 stuff, but use a 2x6, etc.

The furring strips may be either nailed across the joists or nailed on top of them lengthwise.

In regard to arranging the girders and joists we will quote from *Kidder's Building Superintendence*:

"If the girders supporting the incline run the same way as the inclination they should be given the same pitch as the floor, and the joists will then be level from end to end. If the girders run in the opposite direction they will be level endways, and the joists will be on an incline. Whether the joists or girders shall be inclined depends upon the plan of the room, the openings in the walls and the desired spacing of the columns. In arranging girders it should be remembered that it is better, and generally more economical, to give the longer span to the joist and to limit the girder spans to 12 or 13 feet for wood and 16 feet for steel.

Joists 14 inches deep should not be less than 2 $\frac{1}{2}$ inches thick, as 2 inch joists are apt to fail by buckling unless bridged every 4 or 5 feet by solid bridging, and such

bridging will usually cost more than the extra thickness of the joists."

Another method is to set the joists radially and at the proper pitch, the floor being laid directly on the joists, no furring being required. The girders in this case are short and tangent to circles struck from the center used for the circular pews, and one line higher than the other so as to give the proper pitch to the joists when fitted and placed on top.

To fit these joists is a simple matter, as they are practically the same as rafters, and it is only necessary to find the foot cut to have them fit properly on the girders so as to give the required pitch to the floor.

On account of the number of short girders used in this method, the space beneath the room can hardly be used for school room, etc., owing to the columns.

The floor is nailed directly to the joists or furring strips and is laid in straight lines across the room as if it were level, as the boards will spring enough so as to get the dished shape unless the inclination be too great, when a number of them will have to be shaped. Of course, the ends of the boards will have to be cut at a mitre so as to fit nicely against the wall. The boards should be well nailed so as to prevent the tendency to spring back to a level position.

Pew ends can now be bought ready made from a number of mill supply houses at such a low price that it is not profitable to make them oneself. With these ends it is only necessary to get proper lengths of seats and backs and fasten together to complete a pew.

Testing Oil and Paint.

EDITOR PRACTICAL CARPENTER:

What is the best method to test linseed oil to see if it is pure, also white lead and zinc white.

ARNOLD HUISENFELDT.

Fill a narrow bottle with the oil to be tested and hold it up to the light; if bad it will be opaque and cloudy, its taste will be acid and its smell rancid. The oil which is squeezed out of good, full grown seeds should, when held up to the light, appear clear, pale and bright, is sweet to the taste, and has little or no smell.

To tell if any sample of paint is lead or zinc put it into a gas flame. If it is lead it will turn brown by the action of the sulphuretted hydrogen of the gas; if it is zinc, it will keep white and not turn its color.

To find out with what substances white lead may be adulterated would necessitate a chemical analysis, but the following directions will enable one to test if there is any adulteration.

Rub a portion of the lead in a little sulphuric acid on a piece of glass with a bone palette-knife; if it is free from adulteration, and a good lead, it will mix to a smooth paste, free from gritty substances.

To test zinc white place a small piece on an iron spoon and apply the flame of a blow pipe to it until it is burned to a white dry powder, squeeze this until it is very fine.

Now take a small bottle having a solution of 10 parts of water and 1 part nitric acid and let a little of the fine powder fall into it. If it is pure zinc it will dissolve almost immediately, without bubbling or effervescing. If it should bubble or not dissolve it has been adulterated.

TO PREVENT GLUE CRACKING.

Glue frequently cracks because the dryness of the air in the rooms warmed by stoves. The addition of a little chloride of calcium to glue will prevent this disagreeable property of cracking. Chloride of calcium is such an absorbing salt that it attracts enough moisture to prevent the glue from cracking.

TO KEEP TOOLS FROM RUSTING.

Take 2 ounces of tallow and 1 ounce of resin; melt together and strain, while hot, to remove the specks which are in the resin. Apply a slight coat on the tools with a brush and it will keep off the rust for any length of time.

"If a man looks sharp and attentively, he shall see fortune; for though she is blind, she is not invisible."—Bacon.

"New things are more admired and less favored."

LETTERING

A neat booklet, now ready, contains many good things for students,

PRICE, : : 25 CENTS

Draftsmen, DESIGNERS, ARCHITECTS

need our new book on
dimensions of

Pipe, Fittings and Valves

NO BOOK LIKE IT

FLEXIBLE CLOTH BACKS, 50 CENTS

HAVE YOU SEEN A COPY OF

THE DRAFTSMAN?


It is a neat monthly magazine on DRAFTING
and Home Study.

\$1.00 PER YEAR. 4 MONTHS TRIAL, 25 CENTS
or the

Magazine and Lettering for \$1.00

— ADDRESS: —

THE DRAFTSMAN, Cleveland, O.

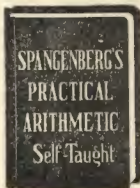

ARITHMETIC

SELF TAUGHT.

Do not despair because through neglect you have forgotten what you once learned about Arithmetic. Prof. Spangenberg's New Method requires no teacher. 228 pages. Price, 50 cents.

GEORGE A. ZELLER, Pub.,

30 S. 4TH ST., St. Louis, Mo.

Established 1870.

Academy of Architecture and Industrial Science.

1742 Chouteau Ave., St. Louis.

An institute for the technical education of mechanics and draughtsmen. Students may commence at any time. Graduates are assisted in obtaining positions as draughtsmen, superintendents, foremen, etc. LESSONS BY MAIL, for home instruction. Send 25 Cents in stamps for a useful book of interest in self-instruction. Mention "Self Education" when writing.

Principal, H. MAACK, Architect.

Author of Stair Scale (\$1.) No Dividers. No Figuring. Joist and Rafter List (10c.) Easy Method.

Books for Carpenters

By OWEN B. MAGINNIS.

Roof Framing Made Easy

A Practical and Easily Understood System of Laying Out and Framing Roofs Adapted to Modern Building Construction. The Methods are Made Clear by Nearly 100 Large and Clear Engravings.

Second Edition, Revised and Greatly Enlarged, Now Ready. Over 150 Octavo Pages, Handsomely Bound in Cloth.

PRICE \$1.00 PREPAID.

The carpenter or builder who will study the methods described in this book will realize the constructive value of every piece of timber which enters into a framed roof, and will understand how to lay out every piece of timber used without wasting valuable time and material on cutting and trying.

The language used is that of the practical workman—scientific phrases and confusing terms have been avoided where possible—and everything has been made so plain that any one who will faithfully study the book will understand it from beginning to end. In fact, every problem in the book was "tried" on a boy who had not experience in building work, and he understood every problem with a little study. This will show that the book is valuable to the beginner as well as the advanced workman.

HOW TO

Measure Up Wood Work for Buildings.

Illustrated by 160 Engravings, 12mo, neatly and durably bound in cloth. Price, 50c.

This book was written so as to place in handy and concise form reliable directions to enable builders and mechanics to measure up the quantities of woodwork for brick and frame houses, accurately and without hesitation, figuring either from plans or on the work.

By its aid blunders in ordering stuff can be avoided and much valuable time and money saved.

The following synopsis of the contents will show the wide scope of the book, embracing, as it does, all forms of woodwork:

Measuring window frames and sashes; door jambs, base, trim, wainscoting; getting sizes of doors; finding dimensions of house fixtures; determining sizes and quantities of portiere screens, transoms and mouldings; measuring up stairs, balusters and hand-rails; getting sizes for inside and outside shutters and blinds; how to figure up rough timber for frame buildings; together with miscellaneous information, tables, etc., etc.

Industrial Publication Co.,

16 Thomas St.,

New York

The CARPENTER'S LIBRARY

EDITED BY FRED T. HODGSON



SENT PREPAID ON RECEIPT OF PRICE.
MONEY BACK IF UNSATISFACTORY.

Price \$2.50

The library consists of 6 of the most useful books a carpenter can have for self-education, they are:

Practical Carpentry. Illustrated by over 300 engravings. Being a guide to the correct working and laying out of all kinds of carpenters' and joiners' work; with the solutions of the various problems in hip-roofs, gothic work, centering, splayed work, joints and joining, hinging, dovetailing, mitering; timber splicing, hopper works, skylights, raking mouldings, circular work, useful rules, tables, data, memoranda, etc., etc.; to which is prefixed a thorough treatise on "Carpenters' Geometry."

Hand Saws—How to Set and File. How to Select and How to Use. Illustrated by over 75 engravings. Being a complete guide for selecting, using and filing all kinds of hand-saws, back-saws, compass and keyhole saws, web, hack and butchers' saws; showing the shapes, forms, angles, pitches and sizes of saw teeth suitable for all kinds of saws and for all kinds of wood, bone, ivory and metal; together with hints and suggestions on the choice of files, saw-sets, filing-clamps, etc., and other matters pertaining to the care and management of all classes of hand and other saws.

The Steel Square and Its Uses. Illustrated by nearly 100 large and clear engravings. Shows how the bevels, cuts and

lengths of any and all kinds of hip, valley and jack rafters may be obtained in the simplest manner; also how stair-strings, raking mouldings and all kinds of mitres may be "cut" exactly with the least possible labor. Many difficult and troublesome mathematical problems can be solved by the use of this tool, and the methods of solving them are shown in this work. It describes how painting, plastering and brick work can be measured, and how many mechanical difficulties can be overcome with great ease. It explains how ellipses, parabolas, octagons, circles and many other figures may be described by the steel square.

Steel Square and Their Uses. Being a description of the various steel squares and their uses in solving a large number of mechanical problems.

Stair Building Made Easy. For Young Carpenters and Joiners. Simple, plain, and may be learned in an hour. Being a full and clear description of the art of building the bodies, carriages and cases for all kinds of stairs and steps.

A New System of Hand Railing; or, How to Cut Hand Railing for Circular and Other Stairs Square from the Plank Without the Aid of a Felling Mould. The system is economical and easily learned.

These books are fully illustrated by fine engravings, well printed on good paper and neatly bound in cloth.

EACH BOOK IS COMPLETE IN ITSELF AND IS SOLD SEPARATELY AT 50 CENTS, POSTPAID.

Every volume is of the carefully corrected and prepared original editions, which have proved so popular that imitators have issued books made from clippings from old papers to compete with them. Our books are free from the stupid and misleading blunders which are found in the editions of Hodgson's compilations not issued by us.

INDUSTRIAL PUBLICATION CO., 16 THOMAS ST., NEW YORK

BRAIN POWER

is the power which is making successful the world's greatest industries. Is it your *brain* that is doing the work and getting the big pay—or the other fellows? It should be *yours* as well as his. *You* can do the work as well as another man if you are *prepared* with an education. The worlds largest firms everywhere are searching constantly for men who are capable of directing their vast

ENGINEERING

and industrial works. This may mean *you*. Have you the education *to do the work*? If *not*, why not get it? A few hours of your spare time a week will be worth more to you if spent in increasing your knowledge, than the money you earn during the balance. Do you wish to be just an average man plodding along in a rut or would you rather join the ranks of the leaders? It is just as easy to be one as the other, but there is a difference in the estimation that the world places upon the two classes. One is always working for small pay, the other gets big wages and is always sure of a position.

The American School of Correspondence is the *only* correspondence school which makes a specialty of engineering work. It is the *only* correspondence school whose instruction is credited for entrance to resident engineering schools and colleges. Why not write for information *now*? It doesn't cost but two cents and may mean hundreds of dollars to you. Tuition fees are moderate—from \$10.00 up, and may be paid in small payments. *The American School employs no agents. All money paid by the student is used in instructing the student.*

**AMERICAN
SCHOOL of
CORRESPONDENCE**

CHICAGO, ILL.

Coupon—Cut out and mail today

Please send your 200-page handbook and advise me how you can qualify me for a position as:

..... Contractor & Builder	 Sheet Metal Pattern
..... Carpenter	 Draftsman
..... Electrical Engineer	 Mechanical Draftsman
..... Mechanical Engineer	 Heating and Ventila-
..... Steam Engineer	 tion Engineer
..... Marine Engineer	 Plumber
..... Civil Engineer	 Structural Draftsman
..... Architect	 Entrance to Technical
..... Telephone Engineer	 School, College Pre-
..... Telegrapher	 paratory Course

Name _____
Address _____
City _____ State _____

Our New Steel Square



Aside from excellence of material and workmanship, the great difference between the best Carpenter's Steel Square and the old iron square of the blacksmith consists of the scales and markings on the improved tool.

Our Square, as recently improved, enables the carpenter to lay out all kinds of work and to calculate quantities with an ease and accuracy never before known. For example: Our new Square with Rafter Table contains a complete practical table, and with it in his possession the workman does not require to make any of those complicated calculations which so frequently give rise to errors in sums in multiplication and division.

Our Steel Square Booklet describing the new tool is a veritable

PRACTICAL TREATISE ON THE STEEL SQUARE

and we will send a copy, without charge, to any one who in writing to us will mention **Practical Carpenter**.

SARGENT & CO.,

1151 Leonard Street,

NEW YORK.

THE STEEL SQUARE POCKET BOOK

A Practical and Handy Treatise Giving the Best Methods of Using the Carpenter's Steel Square.

By D. L. STODDARD.

109 Pages; 112 Illustrations; Cloth Bound.
Price, 50 cents, postpaid.

The size of this book enables it to be carried in the pocket, hence the carpenter can always refer to it for the method of finding the different cuts used in roof framing, stair work, hoppers, towers and bicycle tracks; also directions for describing hexagons, octagons and other polygons, circles, ovals, ellipses, brace measurement, dividing a cone, fascia and frieze cuts, besides directions in clear language for solving other knotty problems by the use of the square.

This book is thoroughly original; every cut is new and specially made for it. One new feature which will commend itself to mechanics is the absence of reference letters on the illustrations, therefore the reader will have no trouble in looking for the various A. B. C's, etc., which are sometimes confusing to beginners. Instead of having to hunt for letters, the reader will find an exact engraving of the square itself laid on the work so as to give the points, lengths and quantities sought.

This is a boiled-down compendium of information about the steel square which can be referred to quickly, having a thorough index.

INDUSTRIAL PUBLICATION CO.,

16 Thomas St.

New York.

THIRD EDITION CORRECTED

16 mo. Cloth Illustrated, 48 pp.

PRICE, 50c.

THE USE OF THE

SLIDE RULE

BY F. A. HALSEY.

Associate Editor "AMERICAN MACHINIST."

With Folding Plates and Diagrams.

D. Van Nostrand Company,

PUBLISHERS and BOOKSELLERS,

23 Murray and 27 Warren Sts., New York


Copies Sent Prepaid on Receipt of Price.

"WHICH WAY" POCKET LEVEL
TELLS in an instant "Which Way" your work is out. See? It is the size of a silver dollar, and three-eighths thick. Nicely nicked and polished. To introduce it, will mail one for 24 2-cent stamps. **Caliper Catalogue FREE.** **E. G. SMITH,**
 Columbia, Pa., U. S. A.



REISSMANN'S

Perfection Sandpaper Holder

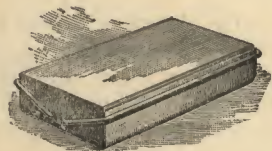

Size 3" x 4 1/2" Pat'd July 28, '93.

It is one of the handiest devices ever made for any one who does sandpapering. You ought to have one in your kit: it will save its cost in time on the first job you use it.

The price is 15 cents, postage 10 cents. You had better send 25 cents and get one by return mail.

Send for my catalog of time-saving tools for carpenters.

F. REISSMANN,

West Point,

New York.

Digitized by:



The Association for Preservation Technology, Int.

From the collection of:

Floyd Mansberger
Fever River Research
www.IllinoisArchaeology.com